

IMPORTANT MESSAGE TO CONSUMERS



This Message About **GROUND FAULT CIRCUIT INTERRUPTERS** Can Save a Life

If You Must Use Your Hair Dryer Near Water,
INSTALL A GFCI* NOW!

Your local electrical contractor can help you decide which type is best for you — a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrical contractor. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all new homes.



WHY DO YOU NEED A GFCI?
Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you, even if the switch is "OFF." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI CAN SAVE YOUR LIFE!
COMPARED TO THAT, THE PRICE IS SMALL!
DON'T WAIT... INSTALL ONE NOW!**

*GFCI (Ground Fault Circuit Interrupter) is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

HEAT/SPEED SELECTION

This dryer features "true two-speed" heat and speed settings at both 125 and 250 volts. Select the small fan position for the LOW setting and the large fan position for the HIGH setting.

OVERLOAD PROTECTION

For your added protection, this unit contains a thermal protector that shuts the dryer off should it overheat. If this occurs, turn the power switch to the off position and let the dryer cool for 10 minutes before resuming operation.

MAINTENANCE

The hair dryer may be cleaned by wiping it with a damp cloth. Keep the air intake vents (located on the back of the dryer) clean by removing accumulated dust with a small dry brush. No other maintenance is required.

To prevent possible damage to the cord, do not wrap it around the hair dryer.

ONE YEAR WARRANTY

We guarantee each new 1875 Watt Travel Hair Dryer to be free from defects in material or workmanship and to perform under normal use and service. This guarantee shall run for a period of one year from the date of purchase, and obligations under this guarantee are limited to remedying any defect or replacing any defective part and shall be effective only if the defective unit is returned to us within 12 months after purchase. Damage due to abuse, misuse, or overloading is not covered by this guarantee. We shall not be responsible for any other loss or damage that may arise through the use by a purchaser or others of this device, and the purchaser assumes such responsibility and will hold Hybrinetics, Inc. harmless in respect to all such loss or damage.

Important: This is a factory direct warranty. Do not return defectives to your retailer. All defectives must be returned to the factory accompanied by a sales receipt with the original date of purchase. For more information please call our toll free number: (800) 247-6900.

Voltage Valet Division, Hybrinetics, Inc., 225 Sutton Place, Santa Rosa, CA 95407
www.voltagevalet.com

©2013 HYBRINETICS, INC.

1875 WATT TRAVEL HAIR DRYER

Dual Voltage for True Two-Speed Operation



Voltage Valet™

1875 Watt Travel Hair Dryer Model HD4

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER - Hair dryers are electrically live even when the switch is off. To reduce the risk of death by electrical shock:

1. Always “unplug” hair dryer immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate dryer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never block the air intake vents of the appliance or place it on a soft surface, such as a bed or a couch, where the intake vents may be blocked. Keep the air openings free of hair, lint, and the like.
7. Never use while sleeping.

8. Never drop or insert any object into any openings or hose.
9. This product is for household use only. Do not use outdoors or operate where any aerosol (spray) products are being used or where oxygen is being administered.
10. Do not direct hot air towards eyes or other heat sensitive areas.
11. Air outlet will become hot during use. Allow it to cool before storing. Never touch air outlet during use or immediately after use.
12. Do not place appliance on any surface while it is operating.
13. While using the appliance, keep your hair out of it—keep your hair away from the air intake vents.
14. This dryer has a folding handle. Do not attempt to use the dryer with handle in folded position. See operating instructions.
15. Be sure dual voltage selector is in correct position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
16. This appliance was set at the factory to operate at 100-125 volts. See below for conversion to 200-250 volt operation.

125 - 250 VOLT OPERATION

This hair dryer can be operated safely in countries which have 100-125 or 200-250 volt electrical service.



NOTE: A wall outlet adaptor plug (not included) may be needed to modify foreign electrical outlets.

IMPORTANT: Before changing from the 125 to the 250 volt and the 250 to the 125 volt setting, make sure the dryer is unplugged from the electrical outlet and the ON/OFF/SPEED switch is in the “0” position.

VOLTAGE SELECTOR RANGE:

100-125 volts set to 125V
200-250 volts set to 250V

VOLTAGE SELECTOR

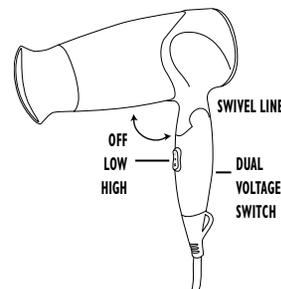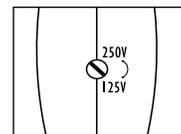

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

FOLDING HANDLE

This hair dryer comes from the factory with the handle in the folded position. Be sure the dryer is unplugged from the electrical outlet and the barrel is cool before folding and unfolding the handle.

ALCI

1. As a safety feature, this dryer has a polarized plug (one blade is wider than the other) and it will fit into a polarized outlet only one way. Be sure to match the wider blade to the wider outlet opening. If the plug does not fit all the way into the outlet, do not force it. Instead, reverse the plug. If it still will not fit, contact a qualified electrician.
2. This hair dryer is equipped with an ALCI safety circuit. Test the ALCI unit before each use. Plug it into a wall outlet and press the ALCI test button. The red reset button should pop out from surface.
3. Press the reset button again to restore power.
4. If the reset button fails to pop out, check the plug connection. If the problem persists, do not use the appliance.
5. The ALCI unit reduces the risk of electric shock from ground fault currents. It does not provide protection against electric shock due to physical contact with the electrical (wall) outlet, or faulty wiring within the electrical (wall) outlet.
6. To reduce the risk of electric shock, do not tamper with or immerse the plug.

VOLTAGE SELECTION

This unit has a dual voltage adjustment so it can be used in both North America and overseas. Before using, make sure the voltage selector is correctly positioned to correspond with the supply voltage of the country in which you are located. Use a thin flat object such as a coin to select 125 or 250 volts.