

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. Read all instructions before using the Quick Café II.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or unit in water or other liquids or use where it can fall or be pulled into a tub or sink.
4. Close supervision is necessary when any appliance is used by or near children or invalids. Do not leave unattended when connected to electrical outlet.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the Quick Café II.
6. Do not operate the Quick Café II with a damaged cord or plug or if the Quick Café II malfunctions, is dropped or damaged. To avoid risk of electric shock, do not attempt to disassemble the Quick Café II. No user serviceable parts are contained inside. Refer servicing to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Voltage Valet may result in fire, electric shock or injury to persons.
8. Do not use outdoors or operate in the presence of explosive and/or flammable fumes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces. Let appliance cool completely

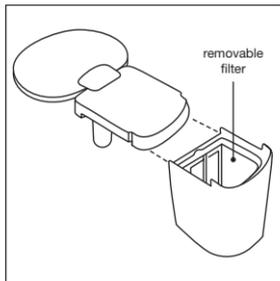


Figure 3

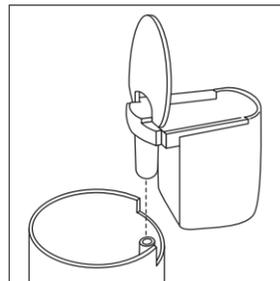


Figure 4

5. Align the back of the filter assembly with the notch in water reservoir and slide into place connecting the filter inlet tube with the outlet tube from water reservoir. Be sure filter is fully seated on the water reservoir (Figure 4).
6. Swing the lid up and fill water reservoir with 8 oz. of cold water. DO NOT fill past the 8 oz. MAX level marked on the inside of the water reservoir. Close lid.
7. Place on a firm flat surface.
8. Place cup under filter basket spout (Figure 5).
9. Plug into an electrical outlet. While holding the base, press the ON button firmly until you hear a click

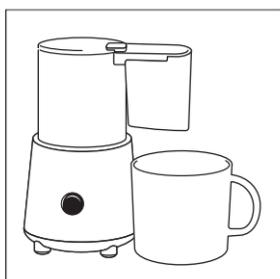


Figure 5

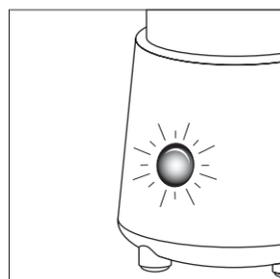


Figure 6

before storing. Loop cord loosely around appliance when storing.

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot water and steam.
12. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
13. Burns can occur from contact with hot metal or plastic parts, hot water or steam; do not remove lid from unit when heating. Scalding may occur if lid is removed during brewing cycles. Always direct steam away from yourself.
14. Be sure lid is secured in place when moving or pouring from this appliance.
15. Do not use the appliance for other than intended use.
16. This appliance is intended for household and travel use only; it is not intended for commercial or industrial use.
17. To avoid the possibility of electric shock, do not plug or unplug from electrical outlet if hands are wet from filling or usage of this appliance.
18. This appliance is intended for use with alternating current (A.C.). Never plug this appliance into direct current (D.C.) outlet.
19. To avoid possible damage from steam, water, spillage or heat, do not place on furniture.
20. Always disconnect the appliance from electrical outlet when filling with water or emptying and when not in use.

SAVE THESE INSTRUCTIONS

and the indicator light glows (Figure 6). Hot coffee will quickly begin to flow from the filter spout into the cup. The Quick Café II will automatically shut off when the brewing cycle is completed. Brewing time is approximately 7 minutes on 120 volts and approximately 3 minutes on 240 volts. **CAUTION:** The filter basket will be hot during and after brewing cycle, allow to cool before next use.

TO CLEAN

1. Allow Quick Café II to cool before cleaning.
2. Fill heating unit approximately half full with hot soapy water and wash interior with a sponge or dishcloth; drain, rinse and dry. The exterior of the heating unit may be cleaned with a damp soft cloth. **DO NOT IMMERSE Quick Café II, ITS CORD, OR PLUG IN WATER OR ANY OTHER LIQUID.** Wash all other parts in hot soapy water, using a sponge or dishcloth. Do not use abrasive cleaners or scouring pads on any parts, as scratching may occur. Do not wash parts in an automatic dishwasher.

TO STORE QUICK CAFÉ II

Allow Quick Café II to cool before storing parts inside. Make sure all parts to be stored are clean and dry. Stack in the following order (Figure 7):

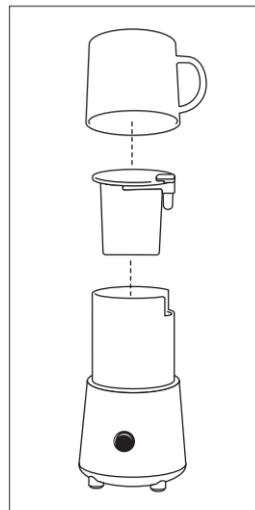


Figure 7

SPECIAL INSTRUCTIONS

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. To avoid a circuit overload, do not operate another high wattage appliance such as a hair dryer, etc., at the same time on the same circuit.
3. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
4. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
5. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
6. Clean all parts before using (See "To Clean").

CHECK VOLTAGE BEFORE USING

1. Your Quick Café II is provided with a dual voltage selector switch that is located on the side of the Quick Café II base. This switch is set at the factory to operate at 120 volts. Refer to "Operating Instructions" section of this manual for conversion to 240 volts (Figure 1).
2. **CAUTION:** Be sure dual voltage selector switch is in correct voltage position before operating. **QUICK CAFÉ II CAN BE DAMAGED IF VOLTAGE SWITCH IS IN 120 VOLT POSITION AND HOT BEVERAGE MAKER IS PLUGGED INTO 220/240 VOLT ELECTRICAL OUTLET.** Before plugging in, read the information about dual voltage operation in the "Operating Instructions" section of this manual. **NOTE:** An adaptor plug may be needed when traveling outside the USA (Figure 2). Ask your Voltage Valet dealer about available adaptor plugs.

OPERATING INSTRUCTIONS

1. Be sure Quick Café II is unplugged.
2. Set dual voltage selector switch to the proper position. For use in the USA/North America, the voltage selector switch should be set in the 120 volt position. For use in most foreign countries, the selector switch must be placed in the 240 volt position (Figure 1). Confirm the voltage available at each location before using the Quick Café II.

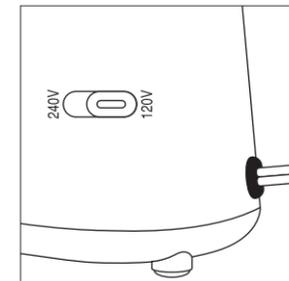


Figure 1

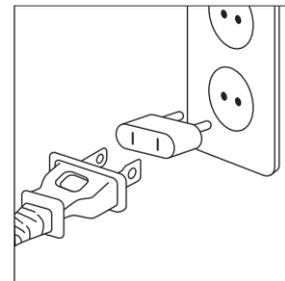


Figure 2

NOTE: Use the proper adaptor plug to make the connection to a 220/240 volt electrical outlet (Figure 2).

3. Remove cup, swing lid up and pull filter assembly from the water reservoir. Clean and dry all parts before using. DO NOT immerse the Quick Café II base in water.
4. Slide the top off the filter basket, remove filter and add one tablespoon of drip grind coffee. Replace filter in basket and slide filter top along basket alignment rails until top snaps in place (Figure 3).

Limited Warranty

We guarantee each new Quick Café II against defects in materials and workmanship for a period of one year from the date of purchase. During the warranty period, we will either, at our option, repair or replace a product that proves to be defective. The above warranty shall not apply to defects resulting from: accident, unauthorized modifications, misuse, abuse, overloading, or improper maintenance. To obtain warranty service, the product must be returned to the address indicated below. Customer shall prepay all shipping charges for a product returned to us for warranty service, and we shall pay for return of the product to customer. However, customer shall pay all shipping charges, duties, and taxes for a product returned to us from another country. **WE MAKE NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THIS PRODUCT. WE SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.** We shall not be responsible for any other loss or damage that may arise through the use by a purchaser or others of this device, and the purchaser assumes and will hold us harmless in respect to such loss. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. **Important: This is a factory-direct warranty. Do not return defective products to your retailer. All defective products must be returned to the factory. For questions or further information, please call our toll free number: (800) 247-6900.**

www.voltagevalet.com

Voltage Valet Division, Hybrinetics, Inc.
225 Sutton Place, Santa Rosa, CA 95407

© 2007 HYBRINETICS, INC.

TRAVEL COFFEE-MAKER QUICK CAFÉ II

Dual Voltage



Model #QC2

Instruction Manual

Read all instructions before using this appliance

